

ATOM SERVICING

SEAT LOCK LEVER

Tools required

2.5mm Allen Key

Circlip Pliers

1. Remove the 2.5mm Allen key, LL6, from the centre of the Lock Lever Handle, LL3.



2. Remove the Cap, LL5, Spring, LL4, and Handle.



3. Remove the circlip, LL2, using a set of circlips pliers.



4. Replace the handle and unthread/unwind the threaded section of the Lock Lever, LL1.



5. Alternatively, you can unthread the threaded section of the Lock Lever and remove it through the inside of the frame, without adding the handle.
6. Reverse to replace – **N.B. the circlip is there to stop the Lock Lever coming out of the frame of the bike. (The Handle Bar, LL7, & Seat Lock, LL1, Lever Thread are different lengths).**